



**When installing regulator on drive end housing, check to make sure if spacers will be required.  
Not all drive end housings will require spacers. See instructions below.**

**CAUTION**

Pay attention to whether or not drive end housing requires spacers when installing regulator in position. Improper use of spacers can damage regulator housing.

Install regulator in level position on drive end housing:

- See Figure 1 for drive end housing requiring spacers
- See Figure 2 for drive end housing redesigned with built-in spacing for regulators

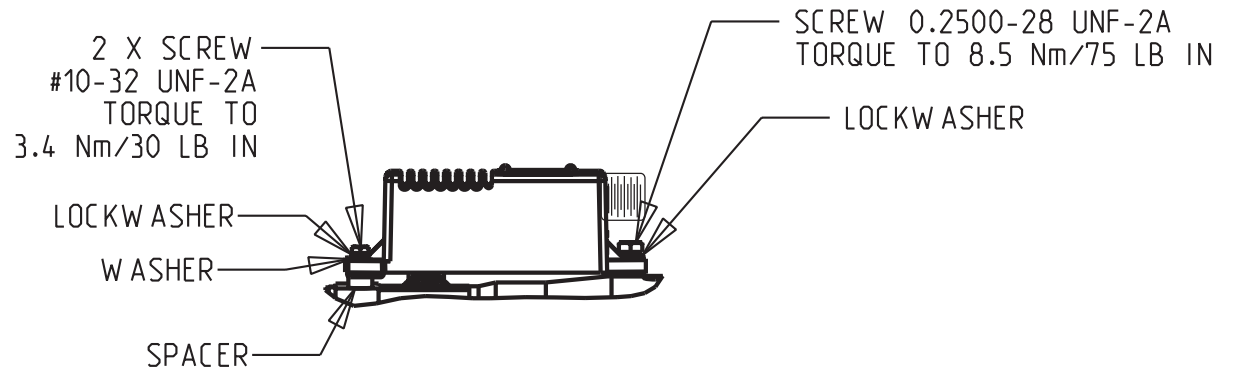


Figure 1 – Regulator Installed on Drive End Housing **Requiring Spacers**

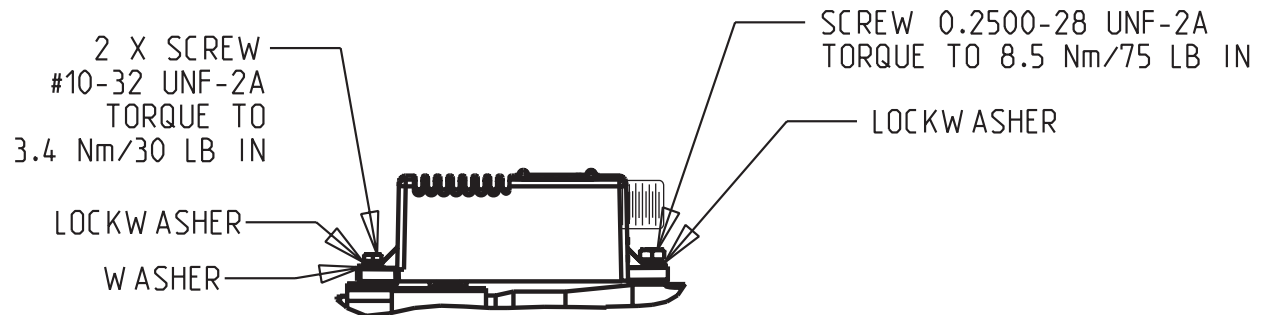


Figure 2 – Regulator Installed on Drive End Housing **Designed With Built-in Spacing (no additional spacers needed)**