 
 
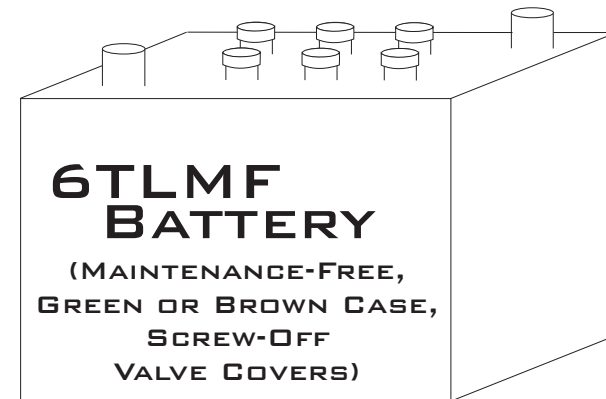 


WARNING

To prevent unsafe operating conditions and severe damage to vehicle and equipment, follow directions below to adjust regulator setpoint.

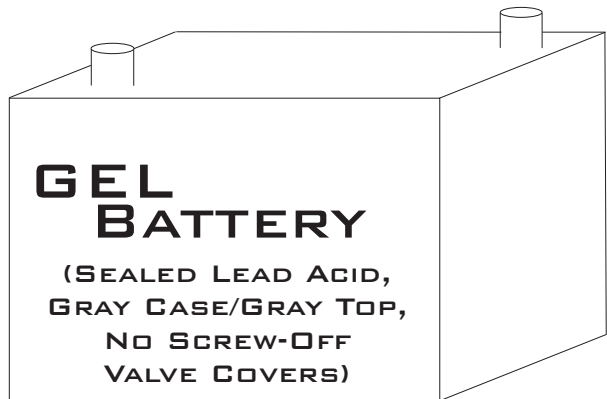

CEN N3264 Regulator Setpoint
MUST be set to Position #1
on underside of regulator
for Gel or AGM batteries

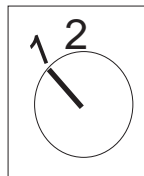

CEN N3264 Regulator Setpoint
MUST be set to Position #2
on underside of regulator
for 6TLFP or
6TLMF batteries

