

N1390 Alternator with N3269 Regulator

Installation Instructions

Follow these instructions to properly install an N1390 alternator fitted with an N3269 regulator:

- 1. Remove nut and disc spring washer from shaft, then remove and discard shaft collar.
- 2. Make sure Woodruff key is securely wedged in shaft slot.
- Install pulley, disc spring washer, and nut on shaft in that order. See Figure 1. Torque pulley nut to 163 Nm/120 lb. ft.

CAUTION

Do not hammer pulley when installing pulley on shaft. Carefully slip-fit pulley over shaft to prevent shaft from moving out of place.

- Mount alternator on engine and torque mounting bolts to engine manufacturer's specifications.
- Install belt on pulley and tension belt to engine manufacturer's recommendation (typically 80-120 lbs).

CAUTION

All cables must be supported within 300 mm (12 in.) to prevent twisting, loosening, and damage to terminals.

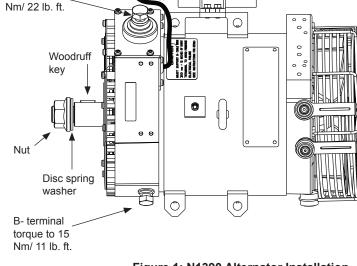


Figure 1: N1390 Alternator Installation


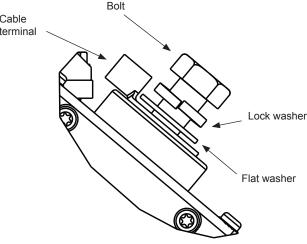


Figure 2: Terminal Hardware Stacking Order

Connect vehicle B+ cable to alternator B+ terminal as shown in Figure 1. Install hardware in stacking order shown in Figure 2. Torque B+ terminal bolts to 30 Nm/22 lb ft.

- 7. Connect vehicle B- cable to alternator B- terminal. See Figure 1. Install cable hardware in stacking order shown in Figure 2. Torque B- terminal bolts to 15 Nm/11 lb ft.
- 8. Install N3269 regulator according to instructions on page 2.

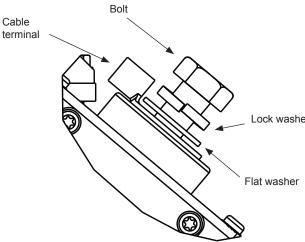

C. E. Niehoff & Co. • 2021 Lee Street • Evanston, IL 60202

Page 1 of 2 11277

B+ terminal

torque to 30

N3269 Regulator Installation

- Align regulator tabs with screw holes on alternator shell and secure with mounting screws. Torque screws to 3.4 Nm/30 lb. in. See Figure 3.
- 2. Connect alternator-to-regulator harness to recepticle on regulator. See Figure 4.
- 3. Connect temperature-voltage sense/J1939 harness recepticle on regulator. Harness sold separately.
- Connect wire leads to E terminal if required to energized regulator. Torque hardware to 3.4 Nm/ 30 lb in
- Connect wire leads to F- terminal if required to engerize field. Torque hardware to 3.4 Nm/ 30 lb. in.



All cables must be supported within 300 mm (12 in.) to prevent twisting, loosening, and damage to terminals.

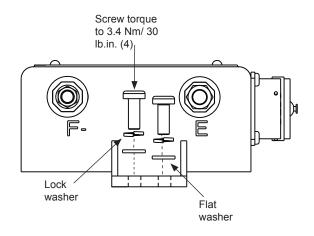


Figure 3: Alternator Installation

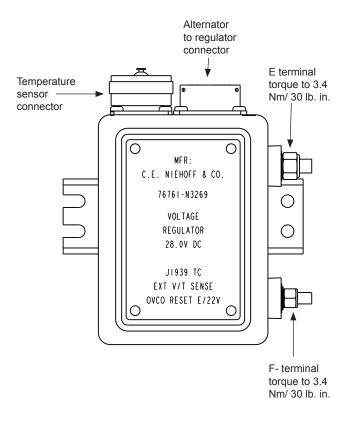


Figure 4: N3269 Alternator

If you have questions about your alternator or these instructions, or if you need to locate a Factory Authorized Service Dealer, please contact us at: C. E. Niehoff & Co.• 2021 Lee Street • Evanston, IL 60202 USA

TEL: 800.643.4633 USA and Canada • TEL: 847.866.6030 outside USA and Canada • FAX: 847.492.1242 E-mail us at service@CENiehoff.com

C. E. Niehoff & Co. • 2021 Lee Street • Evanston, IL 60202 Tech Services Hotline 800-643-4633