



This symbol is used to indicate presence of hazards that can cause major equipment damage.

Install N1235-1 alternator/N3134 Regulator per diagrams on pages 1 and 2.

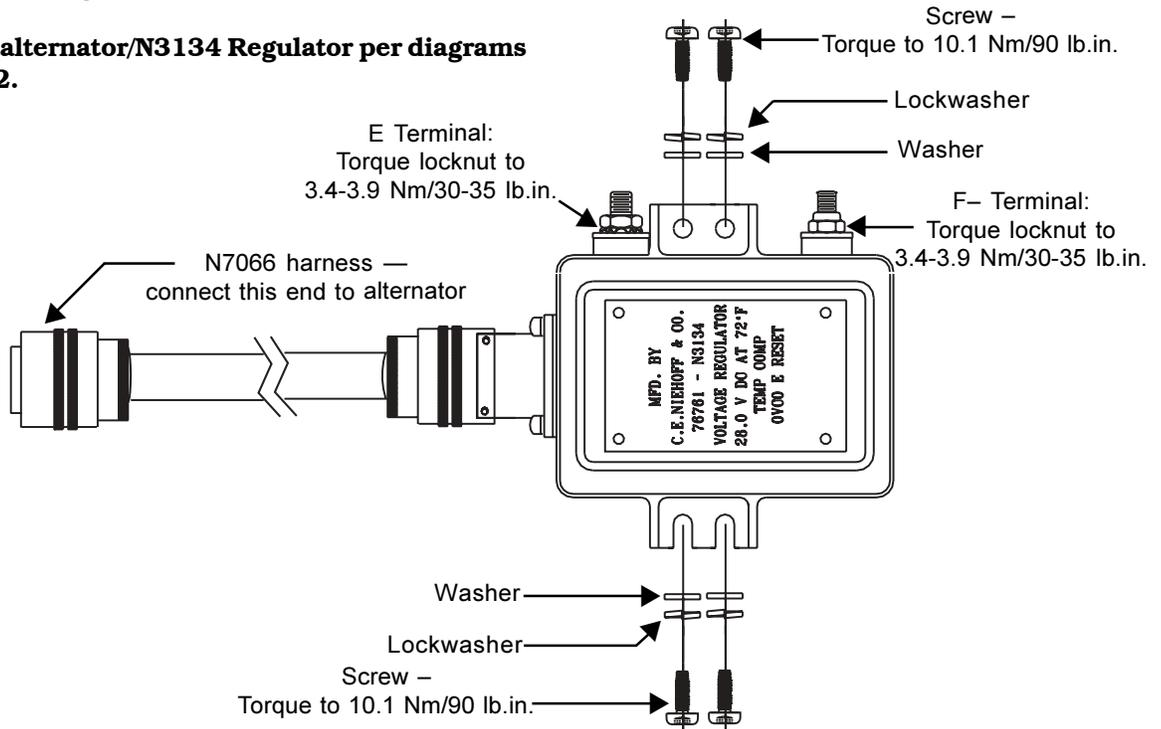


Figure 1a – N3134 Regulator Wiring Connections


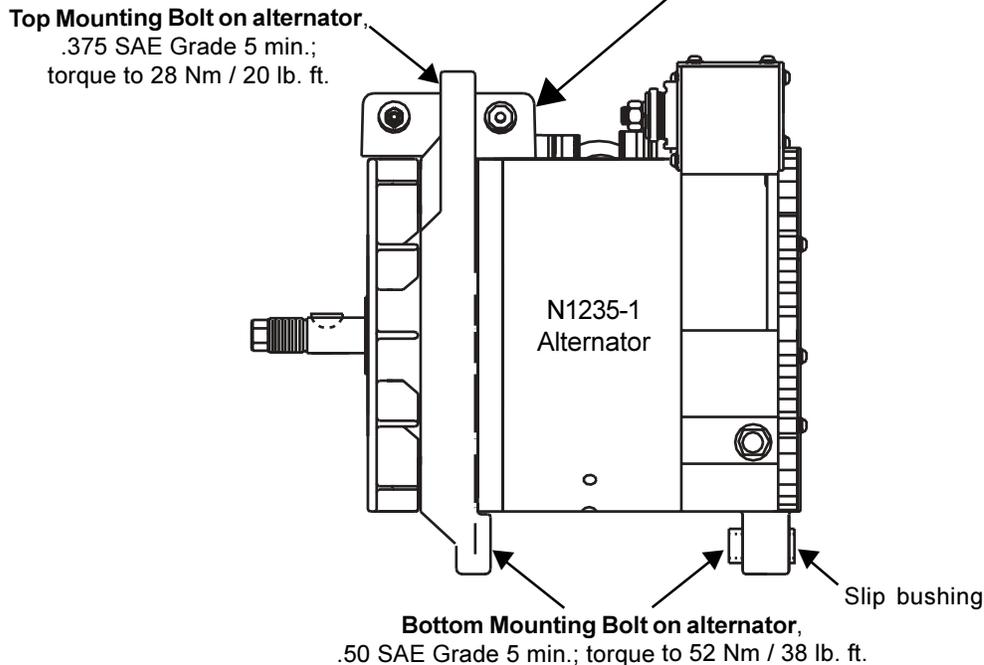


Figure 1– N1235-1 Alternator

 Nut, .3750-16;
torque to 21 Nm / 15 lb.ft.




Disk spring
washer

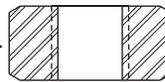

Flat washer




Alternator is shipped with spacer-tag in this position.
Remove spacer-tag and replace with
Vehicle "B+" cable lug.

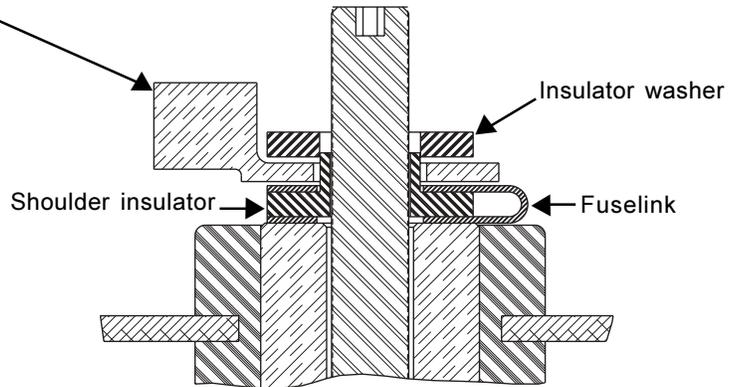

The vehicle B+ cable lug must fit over the shoulder insulator without damaging it. Failure to properly seat the terminal and other hardware can result in major damage to components and other equipment.

Figure 1b – B+ Terminal Stacking Order

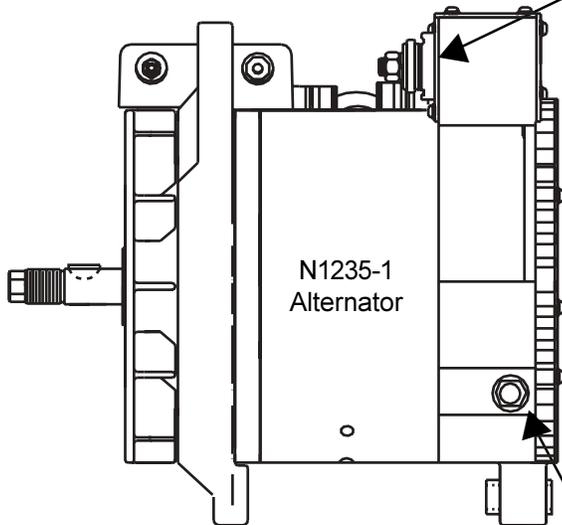

N1235-1
Alternator

Ground Terminal Bolt,
.3125-18 UNC-2A;
torque to 23 Nm / 17 lb. ft.

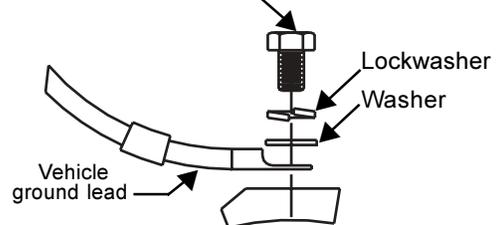


Figure 1c – Ground Terminal Stacking Order