



A9-462 Energize Interrupt Switch

For Use On
Externally-Energized CEN Alternators

Installation Instructions

DANGER

This symbol is used to indicate the presence of hazards that will cause severe personal injury, death or equipment damage.

CAUTION

This symbol is used to indicate the presence of hazards that can cause minor personal injury or equipment damage.

1. Turn off engine.
2. Disconnect battery switch.

CAUTION

Disconnect battery switch to reduce personal injury or equipment damage.

3. Remove B+ hardware at alternator.

4. Using emery cloth or equivalent, clean B+ hardware contact surfaces. Spread light coating of water resistant, dielectric grease on terminal and lugs.
5. Install A9-462 Energize Interrupt Switch in stacking order shown in Figure 1.

DANGER

Failure to follow stacking order will result in substantial equipment damage.

CAUTION

More than two cable lugs on B+ output terminal are not recommended. To properly engage brass terminal, B+ bolt threads must be exposed a min. 1/2" and max. 3/4" after stacking order. Replace with stainless steel bolt of suitable length if necessary

6. Start engine. Check for alternator output.

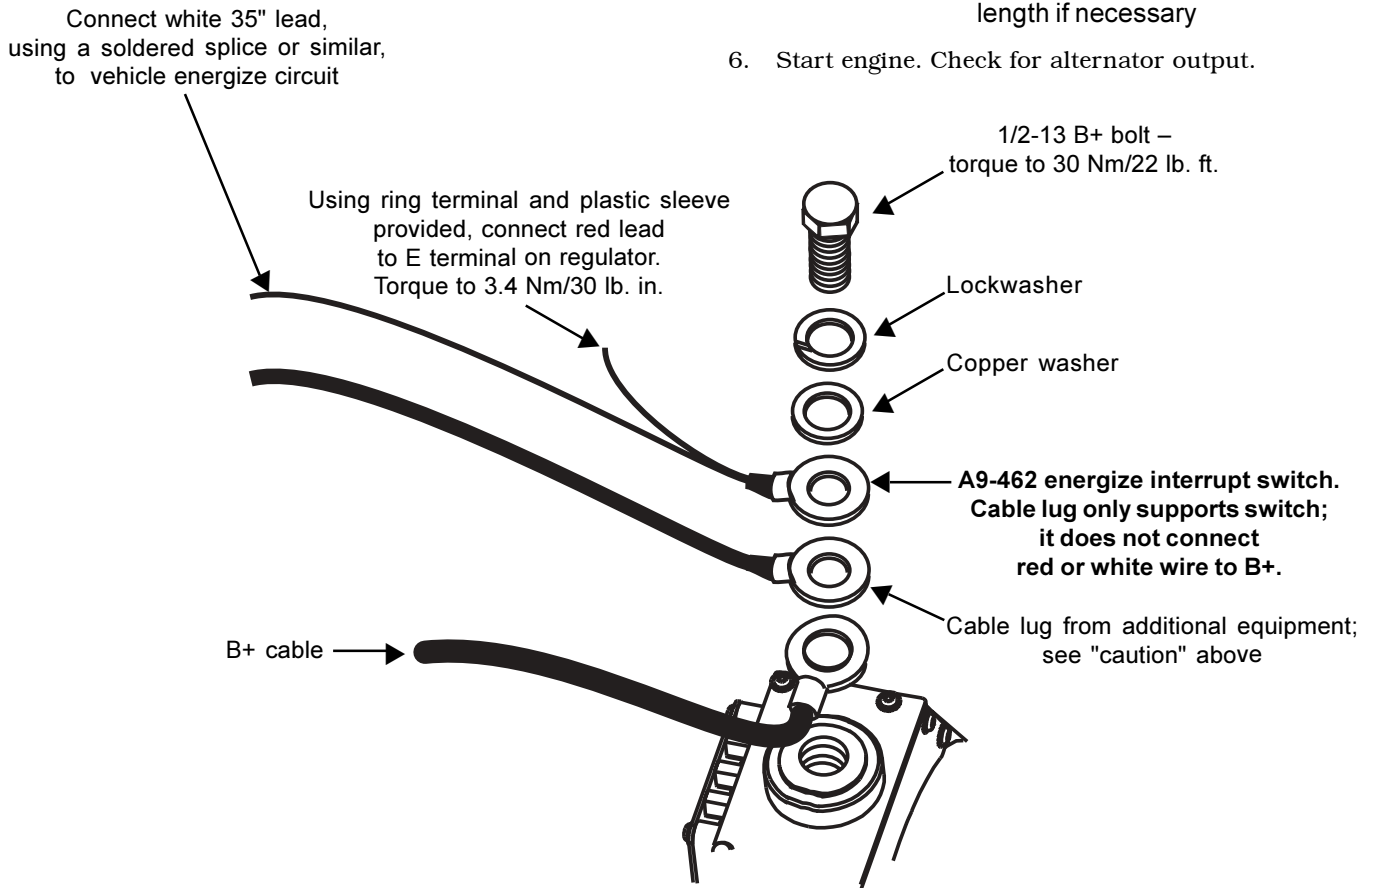


Figure 1 - Stacking Order at B+ Terminal