



## Installation Instructions

**DANGER**

This symbol is used to indicate the presence of hazards that will cause severe personal injury, death or equipment damage.

**WARNING**

This symbol is used to indicate the presence of hazards that can cause severe personal injury, death or equipment damage.

**CAUTION**

This symbol is used to indicate the presence of hazards that can cause minor personal injury or equipment damage.

**WARNING**

Disconnect battery before removing leads. Failure to do so can result in severe personal injury.

1. Install EPM in location specified by vehicle manufacturer. Torque mounting hardware to 3.39 Nm/ 30 lb. in. See Figure 2 on page 2.

**DANGER**

Do not exceed recommended torque. Component damage will result.

2. Connect cables as shown in Figures 1 and 2 in proper stacking order. Tighten to specifications shown in Figure 2.

**DANGER**

Do not exceed recommended torque. Component damage will result.

**CAUTION**

Support cables within 305 mm/ 12 in. of EPM. Failure to do so can cause component damage.

3. Simple wiring schematic is shown on page 2.
4. Test components to make sure they operate properly.

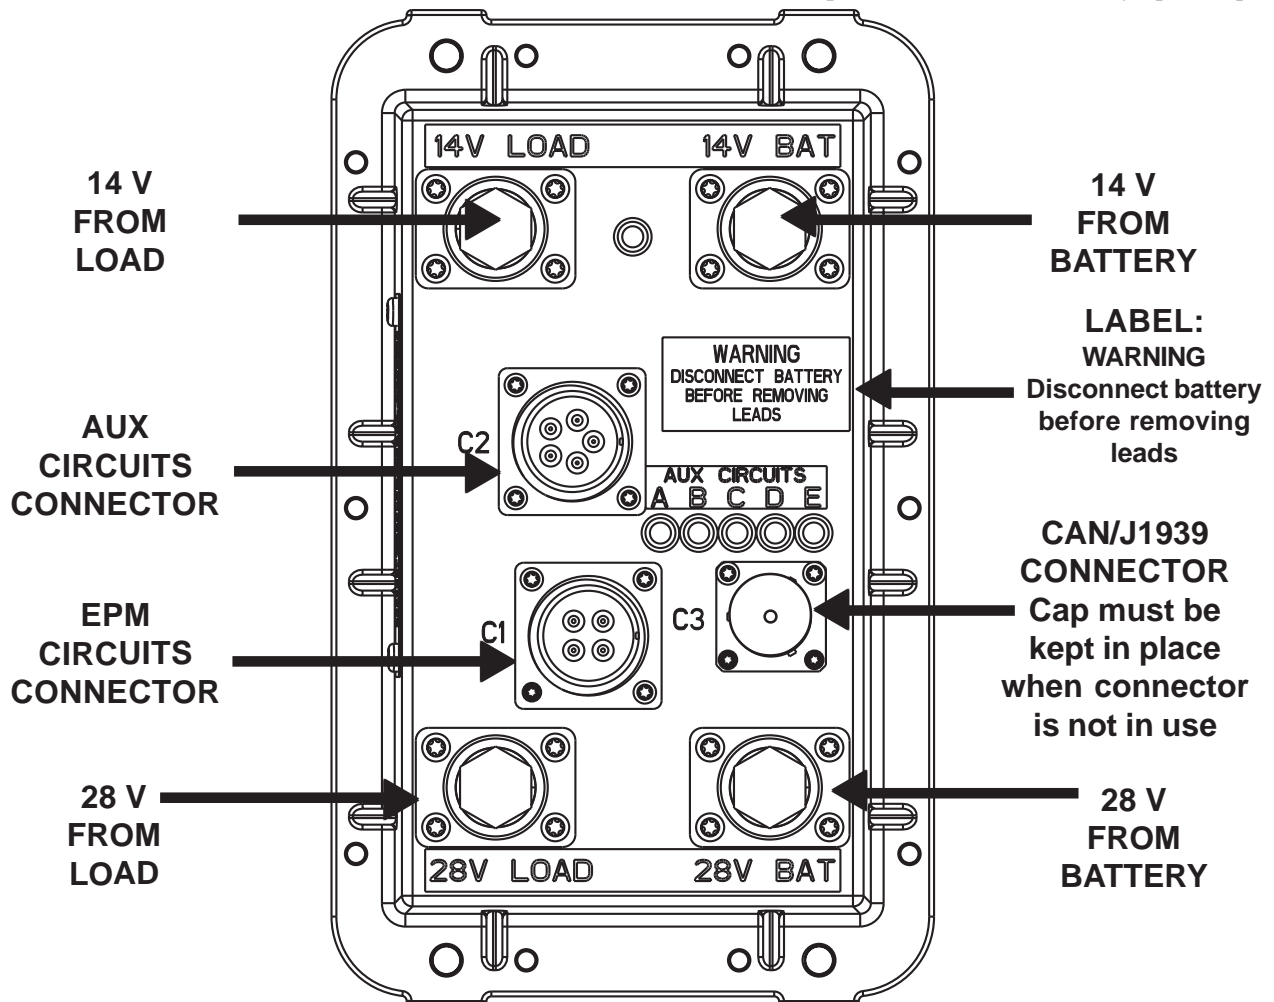


Figure 1 - Cable Arrangement (See Wiring Diagram on Page 2)

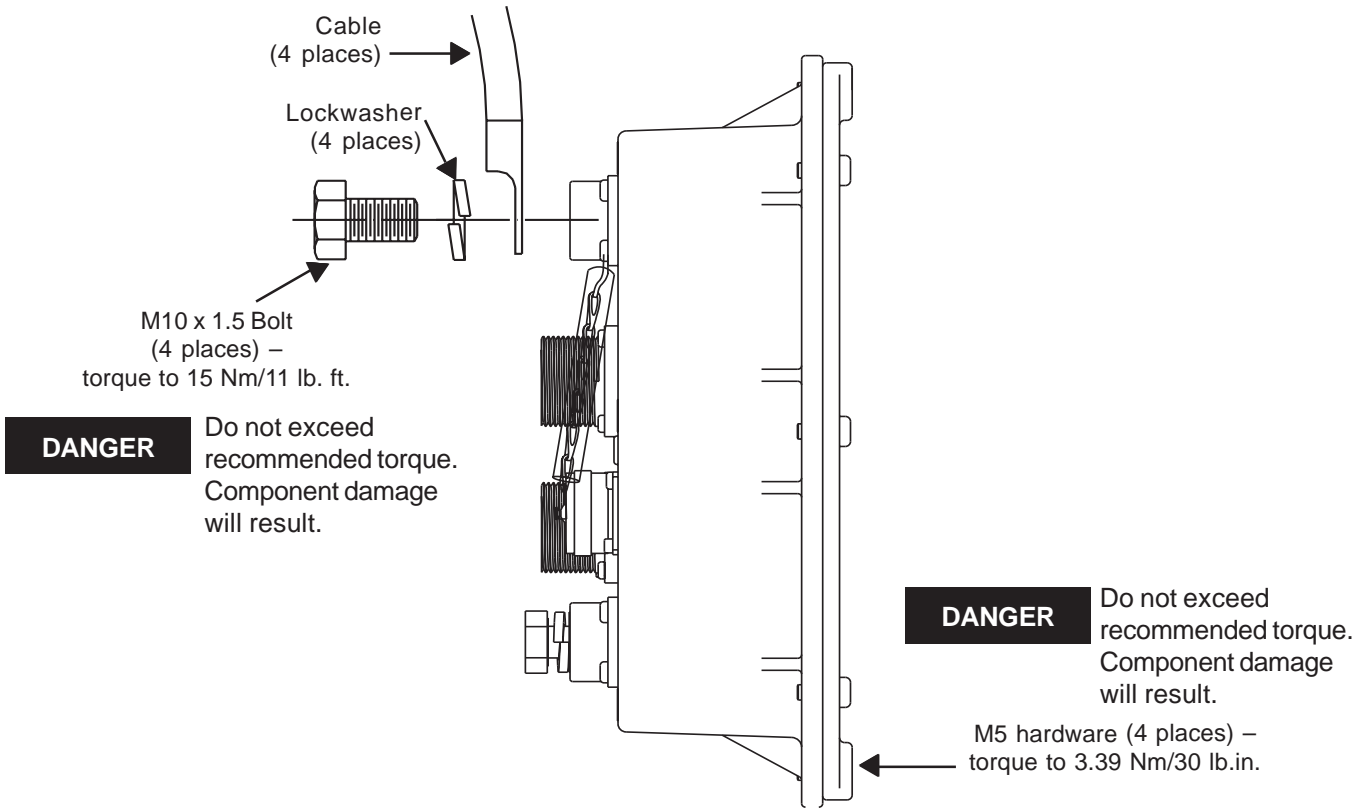


Figure 2 - Stacking Order and Torque

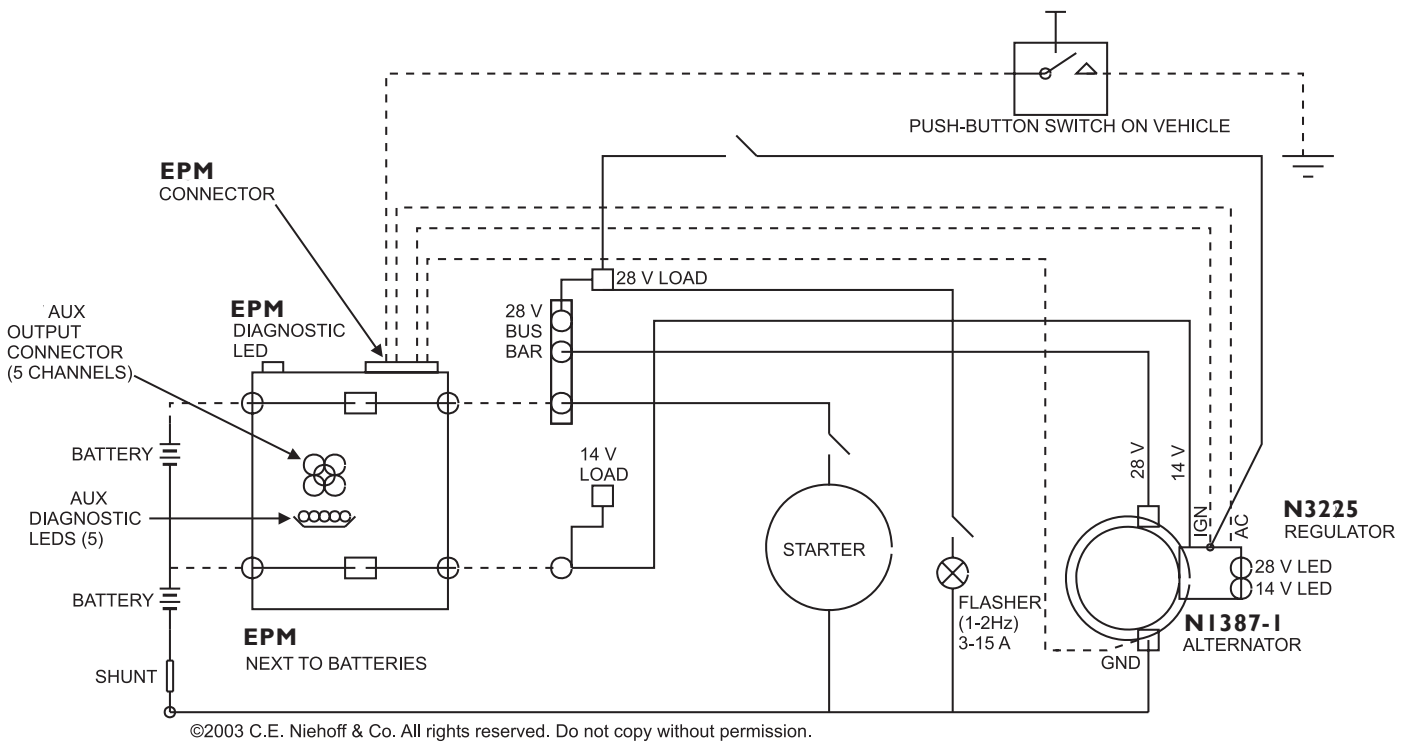


Figure 3 - Simple Wiring Schematic