



A9-4083 connector plug splice adapter allows installer to connect ignition, D+, or phase signal if required. Follow the instructions below to properly install the A9-4083 plug splice adapter.

1. Plug A9-4083 harness adapter into 3-pin receptacle on regulator. Twist plug to lock adapter in place.
2. Splice and crimp D+, phase, and IGN wires to adapter as referenced in Figure 1 below.

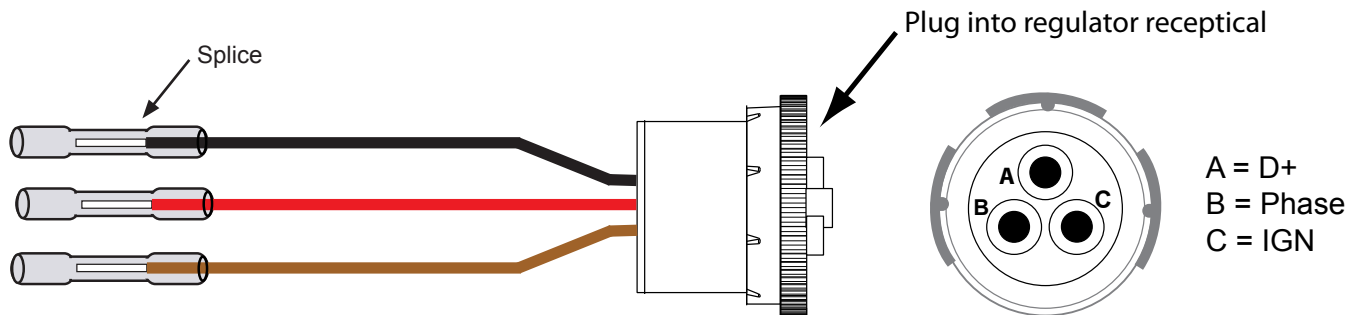


Figure 1: A9-4083 Harness Adapter Assembly

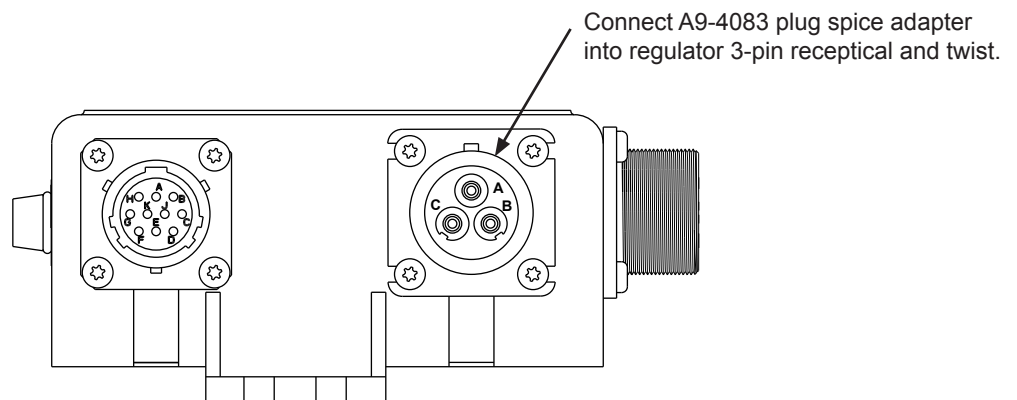


Figure 2: Plug A9-4083 Harness Adapter into Regulator 3-pin Connector